
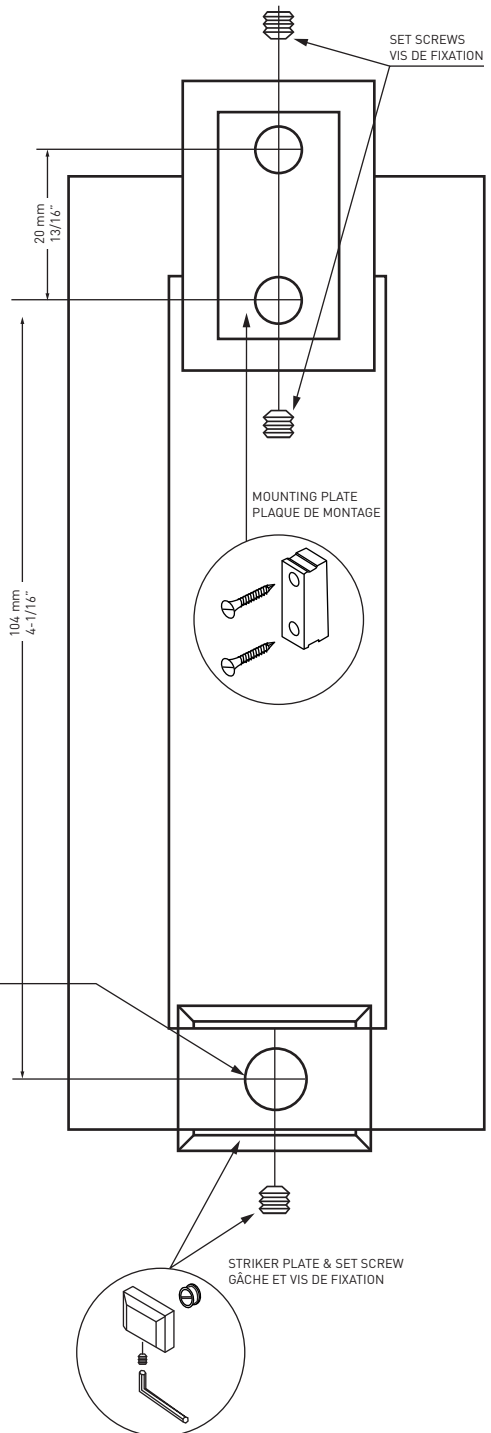


## INSTALLATION INSTRUCTIONS FOR MODERN DOOR KNOCKER 25-D4810

- 1) Center the **mounting plate** on the outside of your door at the desired height.
- 2) Mark the holes on the door.
- 3) Pre-drill the holes.
- 4) Attach the **mounting plate** to your door with the 2 two supplied **screws**.
- 5) Attach the **mounting disc** for the **striker plate** to your door with the supplied screw.
- 6) Attach the **striker plate** to the **mounting disc** by tightening the **set screw** on the bottom of the **striker plate**.
- 7) Attach knocker to the **mounting plate** by tightening the top and bottom **set screws**.

## INSTRUCTIONS D'INSTALLATION POUR HEURTOIRE DE PORTE 25-D4810

- 1) Centrez la plaque de montage sur l'extérieur de votre porte à la hauteur désirée.
- 2) Marquez les trous de perçage sur la porte.
- 3) Prépercez les trous.
- 4) Fixez la plaque de montage à la porte à l'aide des deux (2) vis fournies.
- 5) Fixez le disque de montage pour la gâche à votre porte à l'aide de la vis fournie.
- 6) Fixer la gâche au disque de montage en serrant la vis de fixation au bas de la gâche.
- 7) Fixez le heurtoir à la plaque de montage en serrant les vis de fixation supérieure et inférieure.

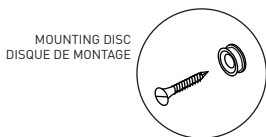

**Customer Service | Service à la clientèle**  
 Western Canada | Ouest du Canada 1-800-267-4774  
 Eastern Canada | Est du Canada 1-800-387-7064  
 U.S.A. 1-800-388-9887  
**taymor.com**